

Greentech pureAir 3000 Harsh Environment Pre-Filter

Assembly Instructions

1. Turn the unit OFF and remove the power plug from the rear power inlet.

1 & 2



2. Remove the screw above the power inlet to remove the unit's rear grille cover.

3. Clean the filter assembly and inside of the unit if needed. If not, place the unit face down in order to access the rear filter assembly.


4



Note: Cleaning or even replacing your existing filter before installing the harsh environment filter is recommended.

4. Lift the right or left edge of the filter assembly frame lid to open it.

5

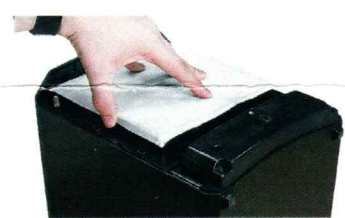

5. Place the harsh environment pre-filter on top, with its edges slightly overlapping each side of the frame.

Note: If you cleaned your filter, make sure it is completely dry before placing the harsh environment pre-filter.

6



6. Hold the filter in place and replace the lid of the filter assembly frame, making sure that it locks in place with the filter as flat as possible inside.

7. To finish, replace the rear grille cover and screw.

8. If it will help, set a 30 day reminder to change out your harsh environment pre-filter for the next time. Keep your extra filters in a sealed bag until ready to use.

